

 
Procedure of changing the **Sharp** Sensor

model: PUV510C(8700AS)




Sharp Sensor


Tools

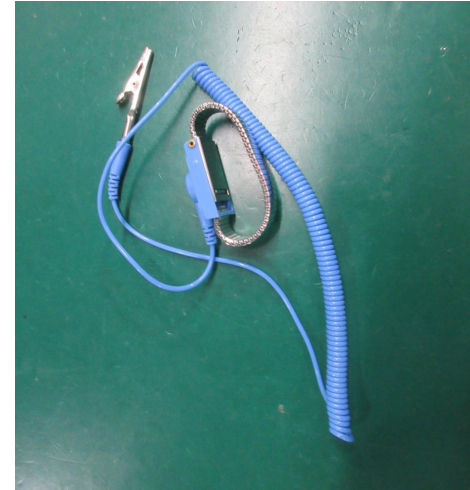


Electrostatic bracelet
(Better to ware)

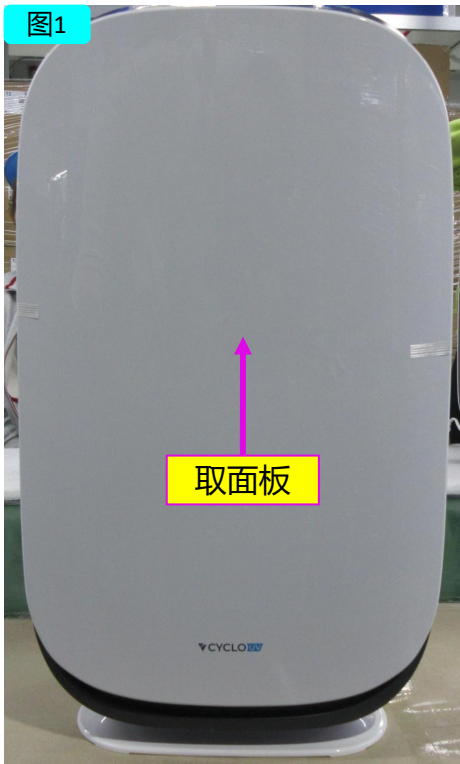


Open the front cover.

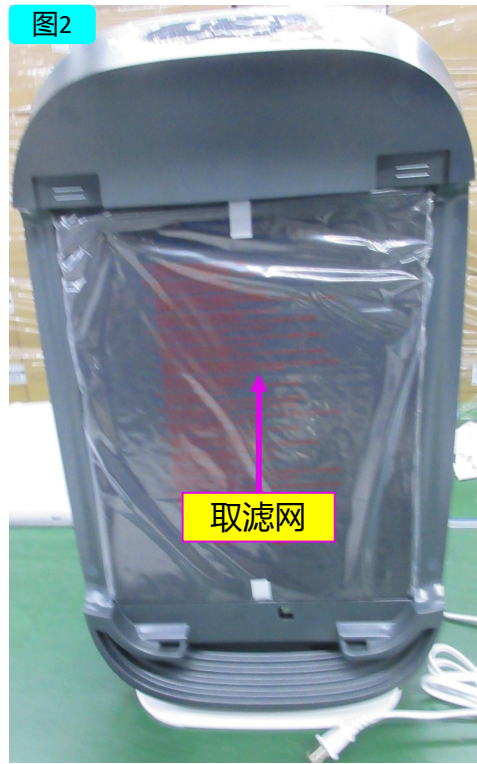

Take off the filter.

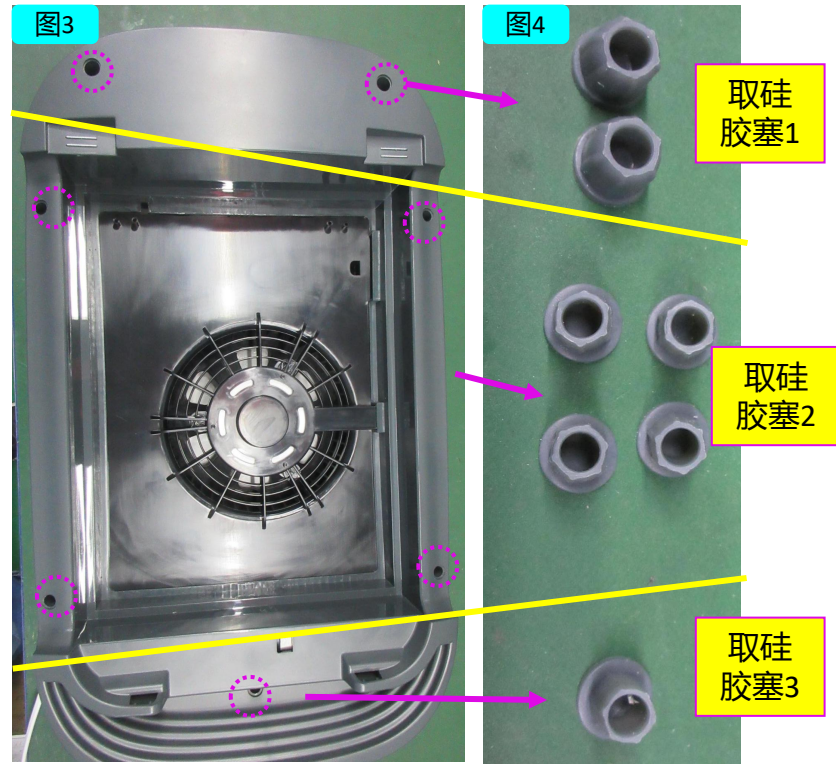

Use a screwdriver to take out the above silicone plug (placed by category).

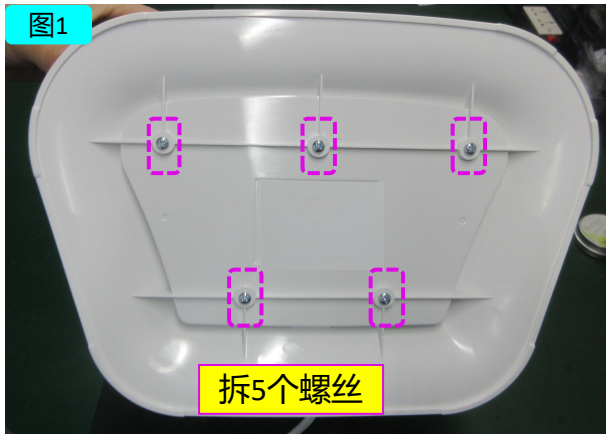

Unscrew above five screws.



Take off the base



 
Unscrew above seven screws inside.



Unscrew above screws



Take off the back cover.

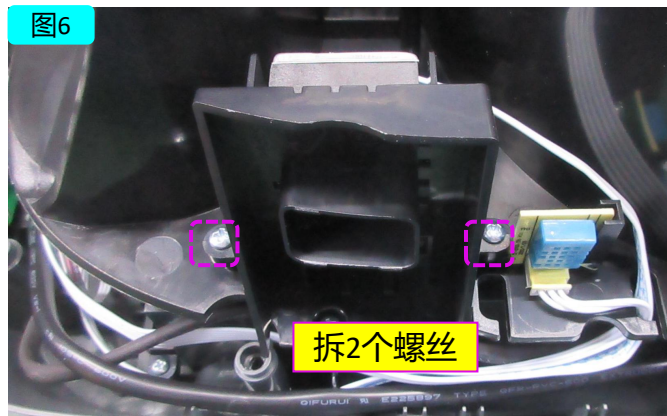

Unscrew above two screws.



Take off the sensor holder.

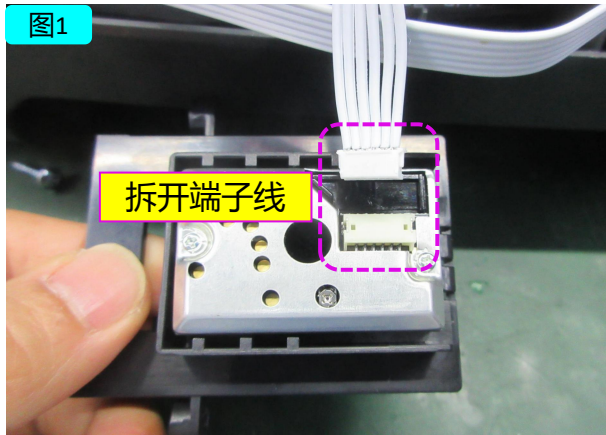 


图1

Unplug the sensor connector.

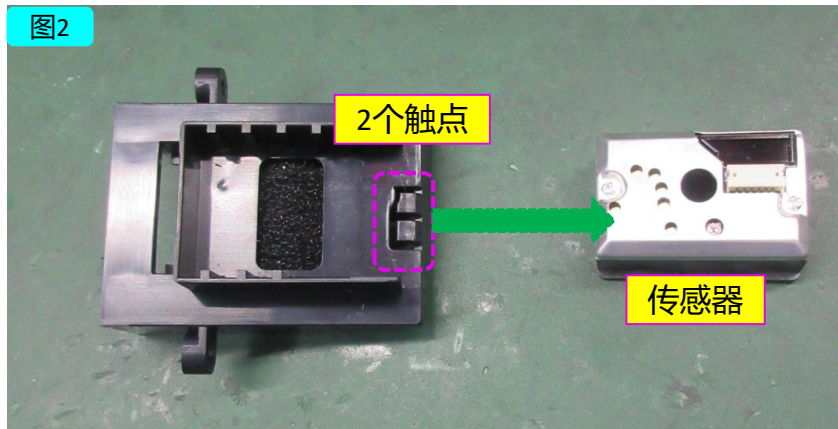 


图2

Press down the 2 contacts of the dust box, pushed out the sensor towards the rib.



图3

Take away the old dust sensor.



图4

Get a new Sharp sensor.

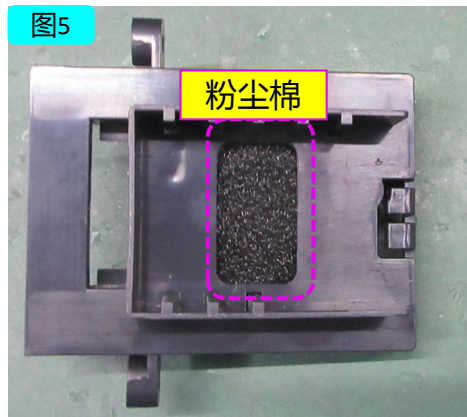 


图5

Make sure the dust cotton is fixed on the dust box.

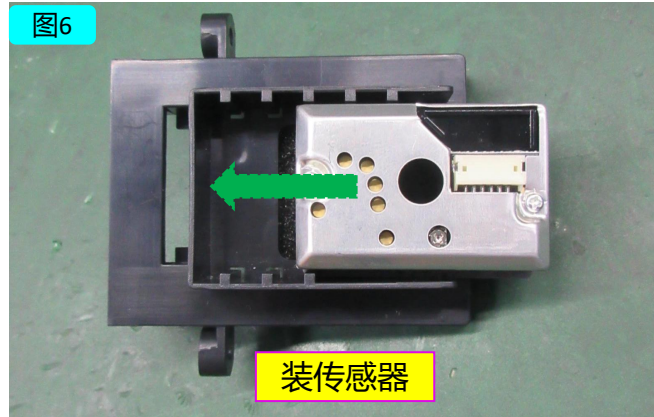 



图6

 Insert the sensor into the dust box.

 


图7

 
 
The sensor is in place.

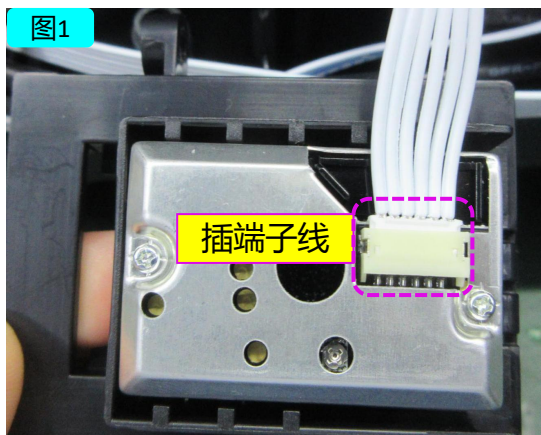

Plug in the connector.

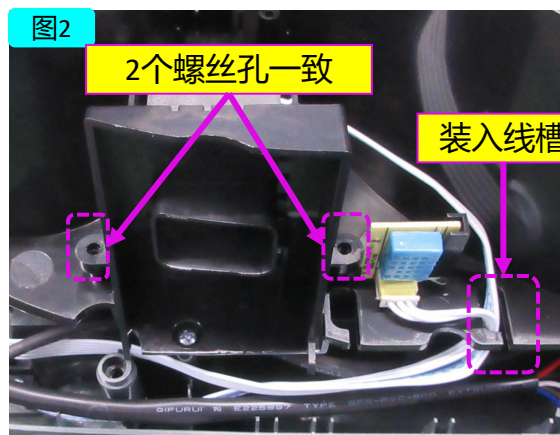




Installed the dust connection wire in the wire trough, and fix the sensor holder with 2 screws.

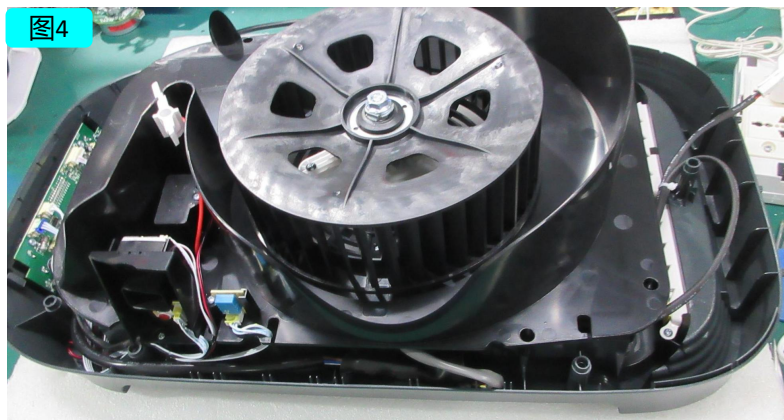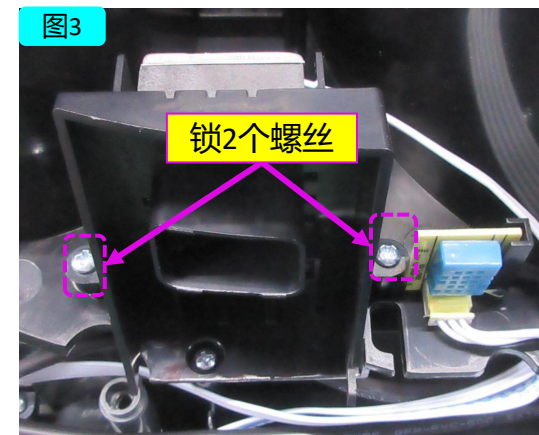


Check that the connecting wire is installed inside, and make sure there is no hidden danger of pressing the wire.



 Fix the back cover back to the unit.

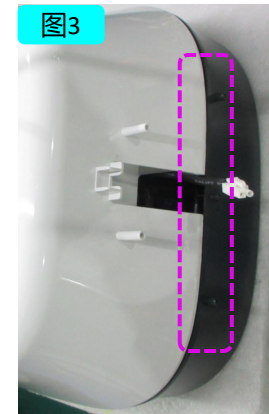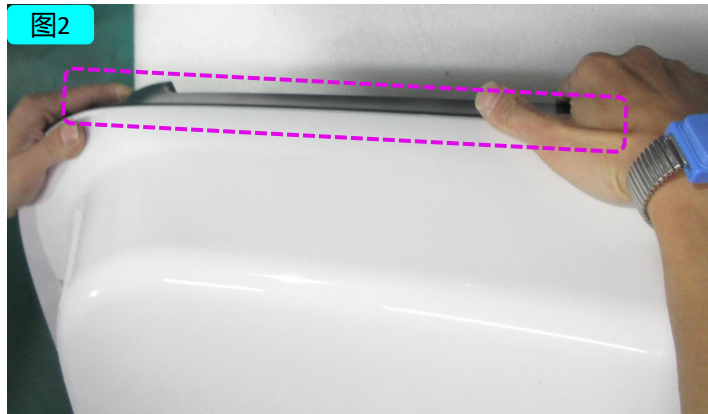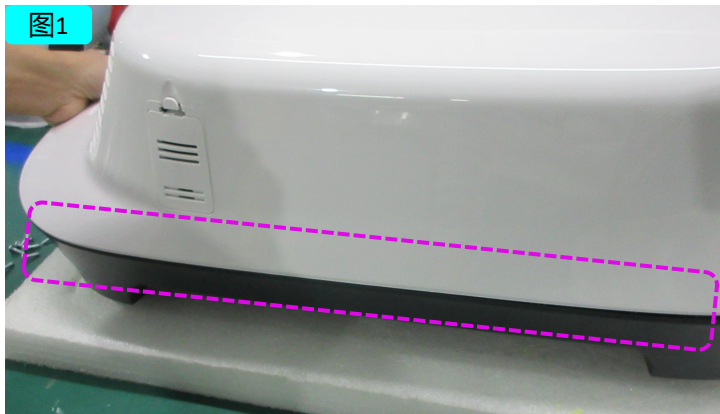

Make sure there is no pressure line around.

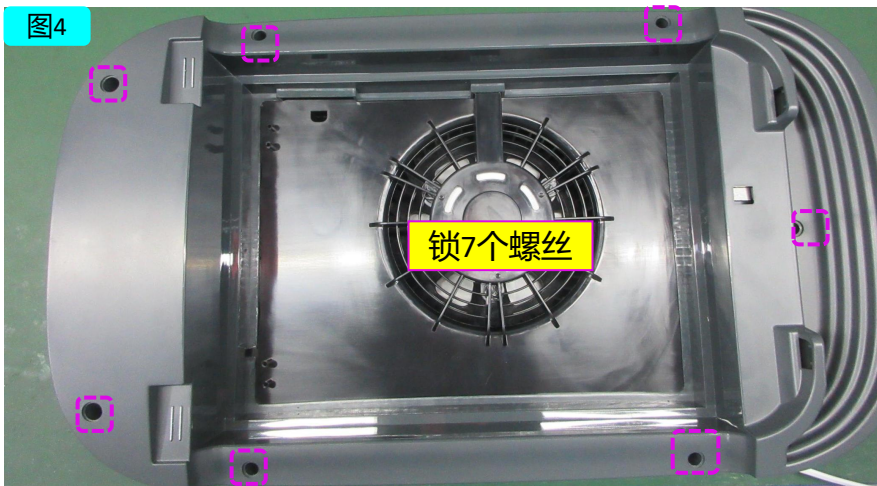

Lock 7 screws.



Lock 1 screws.

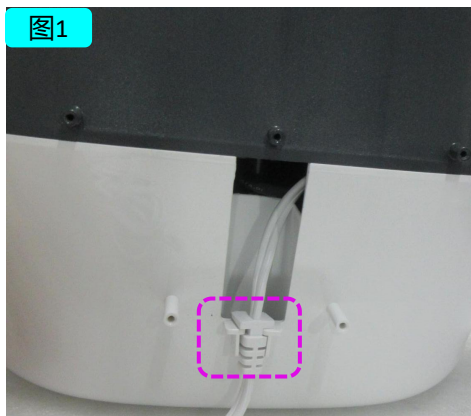


图1

Install the tail end of the power cord into the wire slot and fix it.

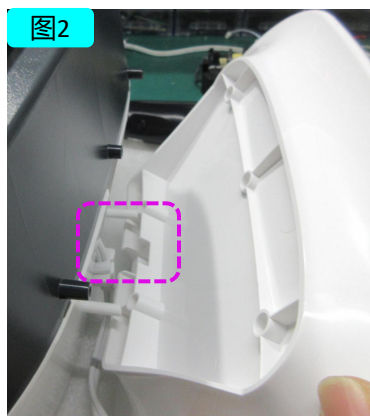


图2

Fix the base back to the unit, pay attention to the step for right direction.



图3

Lock 5 screws.



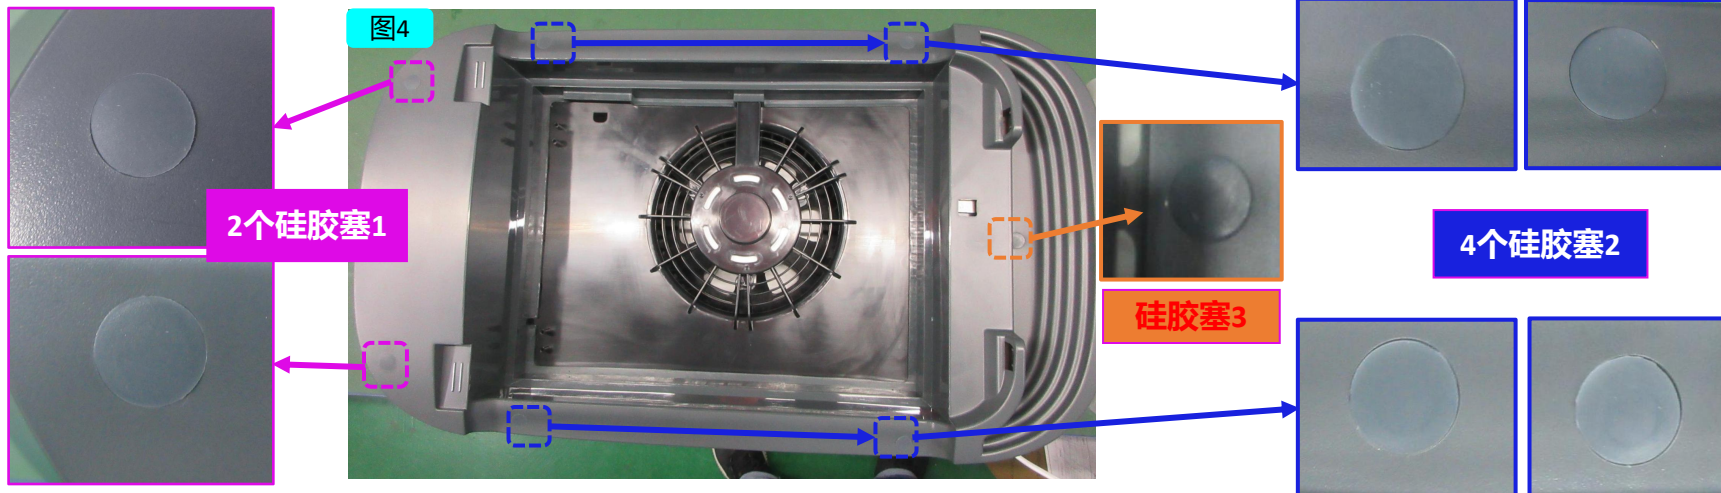 


图4

Insert the above silicone plug.

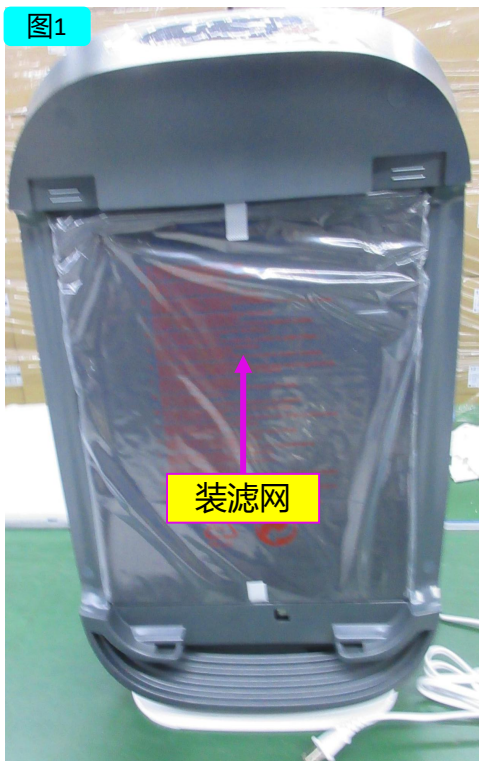

Insert the filter.

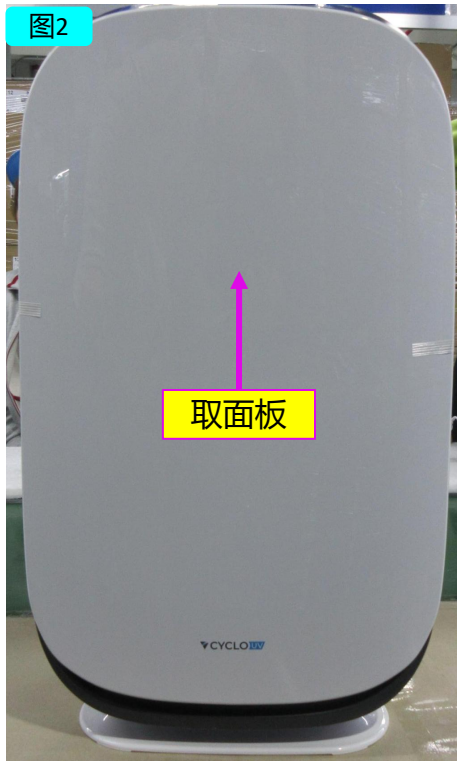

Reattach the front cover.

