Procedure of changing the Sharp Sensor

model: PUV310C(8126AS)



Sharp Sensor


Tools









electrostatic bracelet (Better to ware)

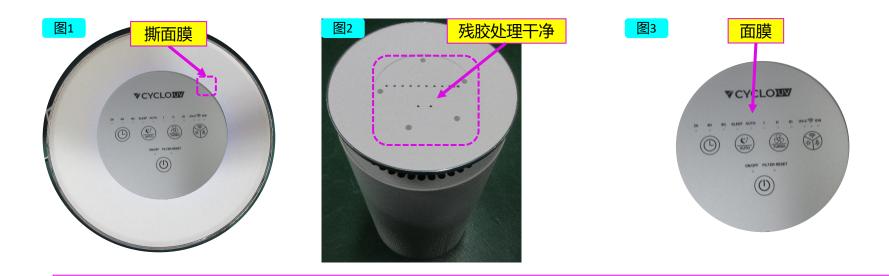


Can use a flat screw driver to help peal of the panel

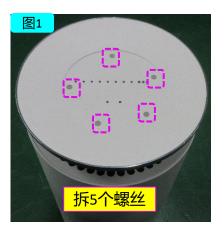

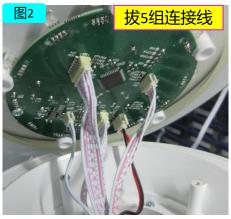



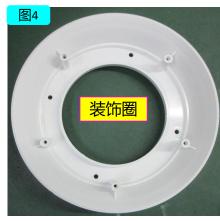


Unscrew above five screws.

Unplug above five connectors.

Unscrew above 4 screws.

Take off above holder.








Take off the outlet.




Unscrew above 4 screws.




Take off the top housing.

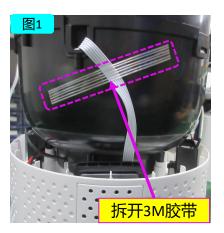

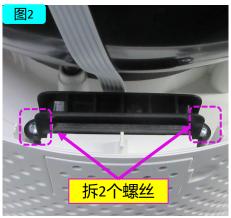



粉尘固定架

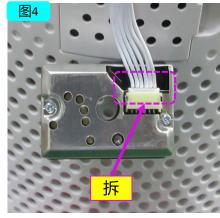

Remove the 3M tape.

Unscrew the 2 screws from the sensor holder.


Take off the sensor holder

Unpluy the sensor connector.



旧粉尘传感器

Take away the sensor.

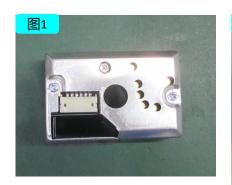

新粉尘传感器


Get a new Sharp sensor

插连接线


Plug in the connector.



Make sure the cord won't cover the sensor hole

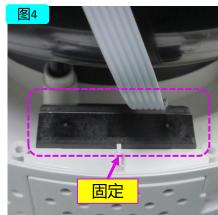

Fix the sensor into the port.

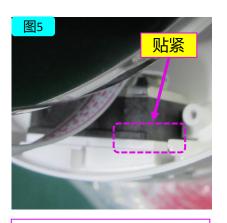


Make sure it fix tight.




Fix the sensor holder with 2 screws.




Pull stright the sensor cord and stick back the 3M tape.

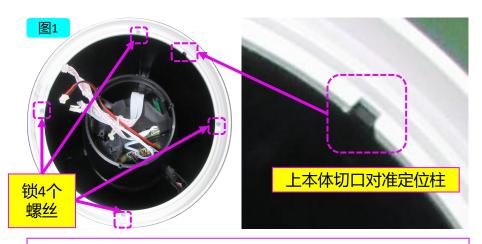

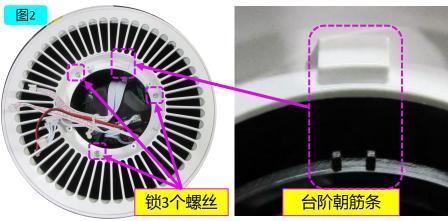


Fix the top housing back to the unit. Pay attentin to the gap for right direction.


Fix the outlet back to the unit, pay attention to the step for right direction.

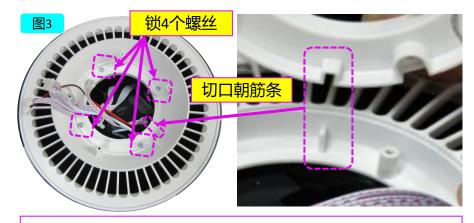


Fix the holder back to the unit, pay attention to the step for right direction.

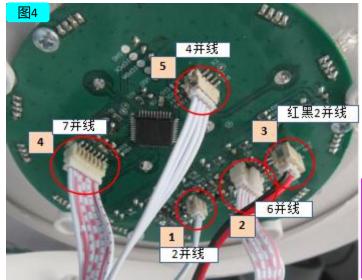

Plug in above five connectors.

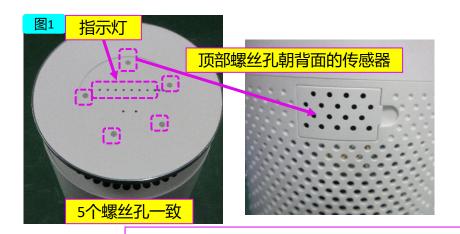

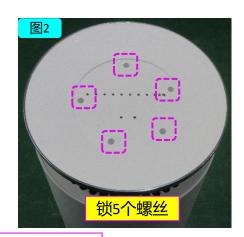



Fix the top part back the unit. Make sure the direction is right.

